


Advantage


Project Profile

Canadian Rendering Plant Improves DAF Performance with Advantage

Without Advantage
Full Chemical Dose
Turbidity = 132 NTU

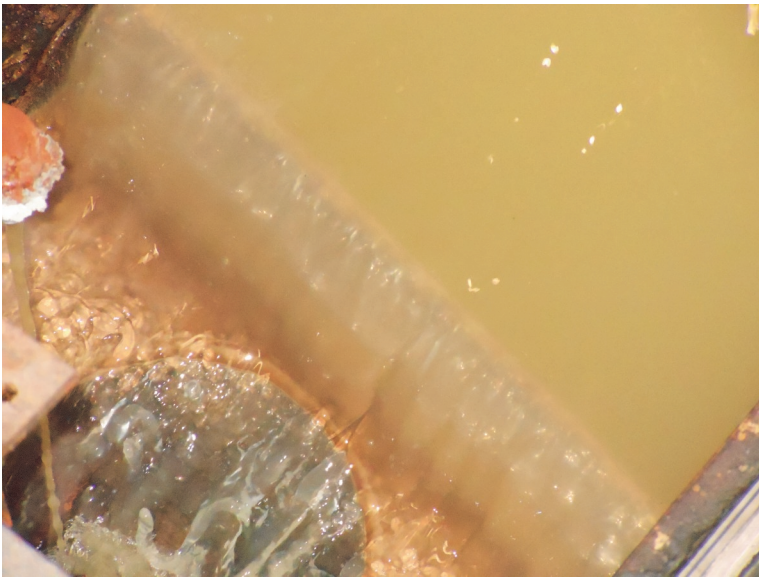

With Advantage
30% Less Chemical
Turbidity = 37 NTU

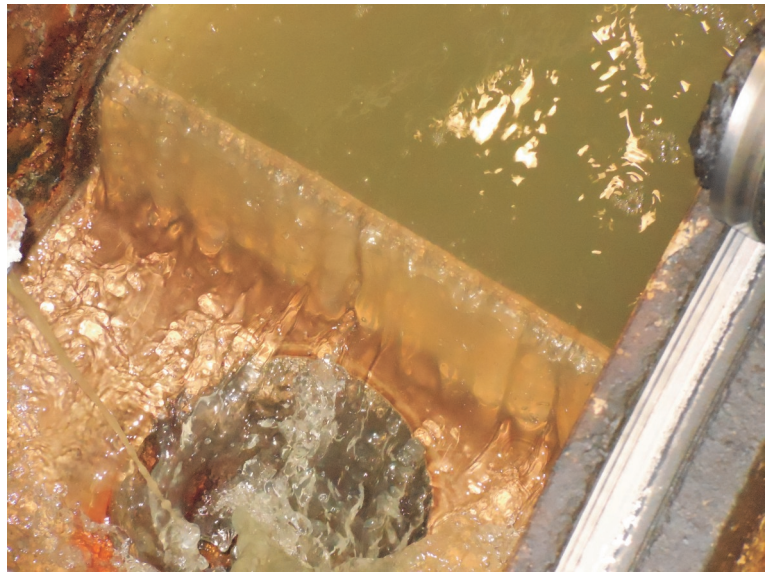

Advantage EC-1

CCI recently tested the Advantage EC-1 Electronic Coagulation system at a major western Canadian rendering facility. Influent water character remained constant throughout the test period. Following one hour of Advantage treatment the water clarity improved tremendously. Coagulant dose was then reduced 30% and after 1 hour the photo on the RHS was taken. Turbidity reduction from 132 to 37 NTU represents a 72% improvement which is remarkable considering the coagulant dose was reduced by 30%. A full 30 day trial is scheduled to follow.